

MAXPEDITION®

RIFTBLADE BOLCCW-ENABLED BACKPACK OWNER'S MANUAL





FEATURES

Custom fabricated Shapeshift[™] webbing handle

Lockable main compartment

Padded compartment with exterior loop field

Quadruple side compression

Loop-lined middle compartment

Ample internal organization

ATtachment LAttice System - ATLAS™ Cut from 840D Nylon-TPU Composite

Removable or stowable padded waist belt with Gear Loops

Forward cinching waist belt adjustment



Ergonomic quick release yoke-style straps

Dual hydration tube ports

Two-way access to fully looplined rear CCW compartment

> CCW compartment with Security Lockout Strip

Adjustable sternum strap










Two-way access to fully loop-lined rear CCW compartment



 $\langle 6 \rangle$

2



Forward cinching waist belt adjustment

MAXPEDITION

ATTACHMENT LATTICE SYSTEM - ATLAS™

ATLAS[™] panels, which are cut from an ultra-tough 840-Denier Nylon-TPU composite, can be used for easy attachment of MOLLE-compatible pouches. The composite material is resistant to water, weather, heat, cold, UV and abrasion.

TO ATTACH ACCESSORIES USING THE TACTIE® POLYMER JOINING CLIPS:



Slide the clip through attachment backing of the pouch until head catches, then insert tail under the first row on the pack/ garment.



Repeat weaving process as needed depending on the length of the clip.




Insert the tail under the bridge, making sure both the tab and the tooth have both clicked into place.



Maximum strength and security are achieved when the pouch and the pack/garment are fully interwoven.




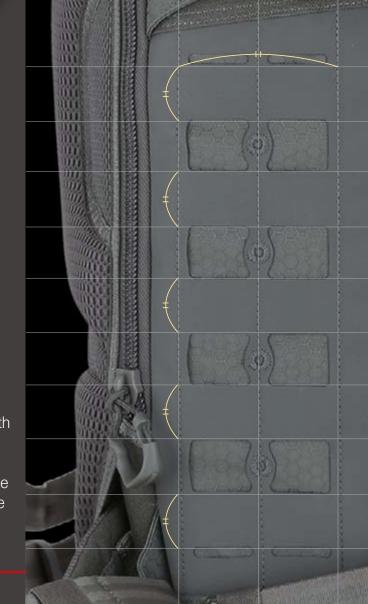

0

(6)



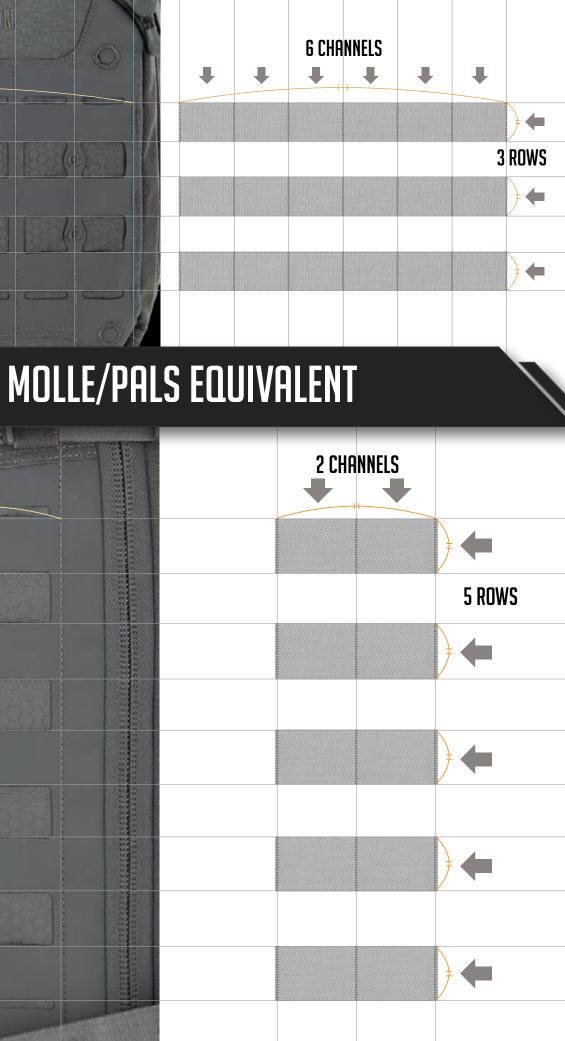



Since the back of the pack has dual side access, a Security Lockout Strip is included. To secure the zipper that is not being used, open that zipper fully. Place the Lockout Strip face down on the loop lining, as close to the zipper track as possible. Using both hands, compress the compartment so the Security Lockout Strip is attached to both sides of the loop lining. Close the zipper and that opening is now fully secure and the compartment can only be accessed from one side. This extra security measure also prevents items from accidentally breaching the zipper and falling out of the pack.

LOOP-LINED MIDDLE COMPARTMENT

The middle compartment, which has a full clamshell opening, is fully loop-lined for the attachment of CCW or hook & loop accessories to add an additional layer of organization to your pack.






Stabilizer straps, also known as load adjuster straps, help the pack straps conform better to your body, balance the load and secure the bag to your back. Start by loosening these straps completely, put the pack on, then tighten the straps until they are properly adjusted.

ERGONOMIC QUICK-RELEASE YOKE-STYLE STRAPS

Yoke-style straps make for a more ergonomic and comfortable fit. Put on the pack and pull the adjustment straps down at about a 30-degree angle downwards. The hip belt will then rise on your body. As soon as the center of the waist belt is level with your hipbones (or in a comfortable position), stop pulling the adjustment straps and buckle the hip belt.

STABILIZER STRAPS



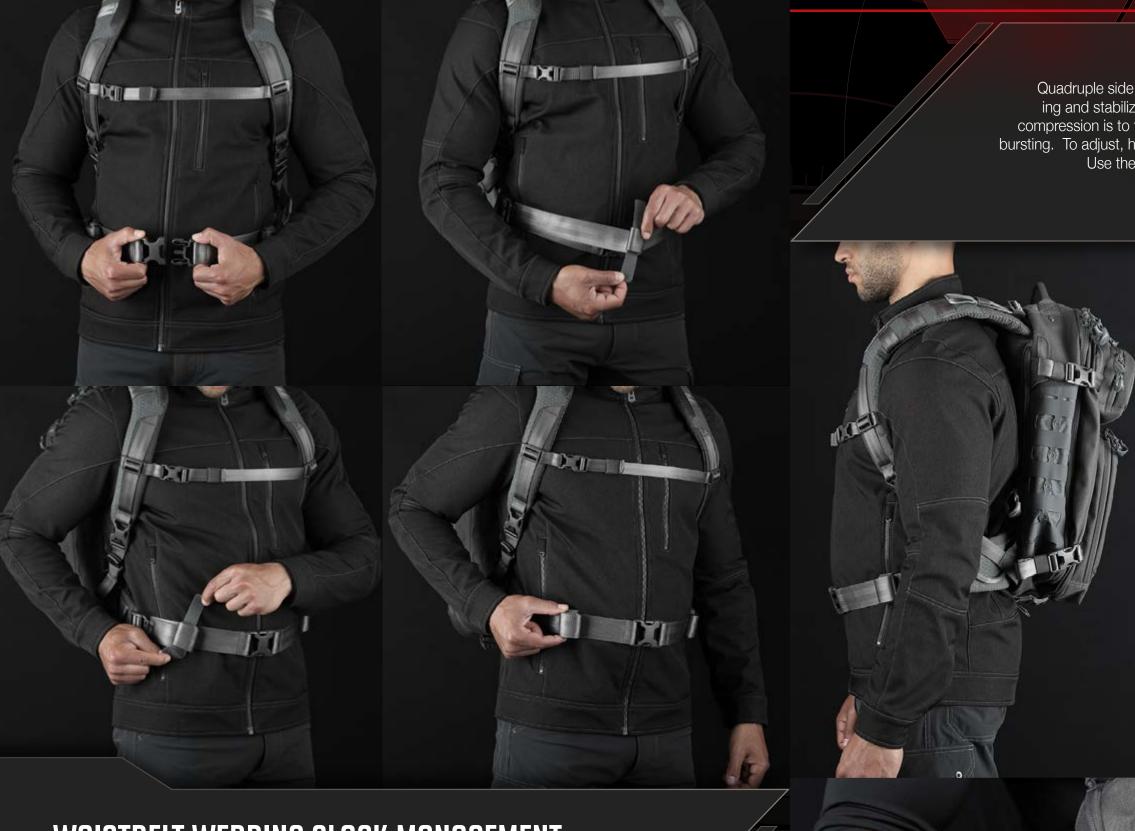

WAISTBELT WEBBING SLACK MANAGEMENT

After tightening your waistbelt, you can manage the slack webbing by rolling it up and retaining it with the built-in hook & loop straps.

QUADRUPLE SIDE COMPRESSION

Quadruple side compression straps with quick release buckles aid in compressing and stabilizing the load for optimal carry. Another important function of side compression is to take the strain off the zippers, lowering the chance of the zippers bursting. To adjust, hold the buckle, pull the webbing strap, and cinch it to compress. Use the elastic loops to keep excess strap webbing from hanging loose.



STOWABLE & REMOVABLE PADDED WAIST BELT

The padded waist belt can be stowed away or removed completely if you prefer not to use it. To stow the waist belt, disengage the buckle and tuck into the sleeve. To remove, separate the hook and loop that holds the belt in place and slide the belt out.

SHAPESHIFT[™] WEBBING GEAR LOOPS

Shapeshift™ gear loops have been added to easily allow you to pull the pack from the back of your body to the front. Simply remove the opposite shoulder strap, grab the handle, and pull forward so the pack is now in front of your body. The gear loops are also the perfect place to hang items like carabiners.



DUAL HYDRATION TUBE PORTS

An internal sleeve located in the main compartment allows for the easy addition of a hydration reservoir and provides proper weight distribution. Dual hydration ports allow you to add the drinking tube to either the right or left side of the pack, depending on your preference. To attach a hydration reservoir, insert into pocket. Place the provided strap through the reservoir cap loop, going from the bottom up. Weave the strap through the buckle and tighten to secure the reservoir. Put the tube through the preferred port, then place under the webbing on the shoulder strap to secure. HYDRATION RESERVOIR NOT INCLUDED

FUNCTIONS - EXTERNAL

CUSTOM FABRICATED Shapeshift™ Webbing handle

This specially developed narrow fabric transitions seamlessly between flat to round cross-sections. Flat webbing may be abrasive on hands, so the rounder Shapeshift[™] webbing makes the pack more comfortable to hand carry.





PADDED COMPARTMENT WITH EXTERIOR LOOP FIELD

With a loop lined soft interior, this pocket is ideal for storing small accessories that you want to keep handy. A loop field has been added to the exterior to attach morale patches.



POSITIVE GRIP ZIPPER PULLS

Positive grip zipper pulls are designed to fit a finger in order to get a better grip when opening/closing zippers. They also allow you to grab them from any direction and get a positive grip.

RIFTBLADE[™]



LOCKABLE Main Compartment

Lockable YKK#10 zipper sliders allow you to secure the main compartment with a padlock, keeping your valuables safe and secure. Bring the sliders together until the hoops are overlapping, put the lock through, and secure the lock. Maxpedition[®] recommends a TSA approved lock when traveling.



FUNCTIONS - EXTERNAL

FUNCTIONS-INTERNAL **RIFTBLADE**[™]

BOTTOM TIE-DOWN Straps

Tie-down straps allow you to externally attach gear to your pack, such as a small tent, sleeping bag, or jacket. Loosen the straps, then cinch to compress and keep your cargo secure. Use the elastic loops to keep excess strap webbing from hanging loose.





ADJUSTABLE Sternum Strap

After the shoulder straps have been adjusted properly, adjust the sternum strap so that it sits comfortably on your chest below the collarbone by sliding the straps up or down. Buckle and cinch to compress. Use the elastic loops to keep excess strap webbing from hanging loose. This will enable you to distribute the pack weight more evenly.



FRONT ADMIN Compartment

Multiple pockets are available to keep small and medium objects organized and secure. A key leash is supplied in the front pocket, which allows you to easily attach and locate your keys.

PADDED TOP POCKET

This padded pocket is ideal for storing sunglasses, electronics, and valuables that you do not want to get scratched or broken. Attach patches to the loop field on the exterior.



FUNCTIONS - INTERNAL

Main Compartment

A dual opening Gossamer[™] mesh pocket and small upper pocket can be used to keep your gear stored properly. A rear sleeve has been added to accommodate a hydration reservoir or 15" laptop computer. High visibility grayscale interior makes finding objects much easier.

HYDRATION RESERVOIR NOT INCLUDED





FRAY-RESISTANT Gossamer™ Mesh

Gossamer™ mesh pockets are a medium gray while other details such as elastic loops and zippers are dark gray, providing visually distinguishable areas for gear storage. The Gossamer mesh is also partially see-through in order to view contents without opening the pockets.

KEY LEASH™

To keep your keys easily accessible, press on the tab with your finger and attach a key or key ring. To release, press on the tab again and lift to remove your key(s).



RIFTBLADE[™]



SUBTLE HEXAGON PATTERN FABRIC

The inside is lined with a gray 420-Denier nylon fabric. The fabric is heat-embossed with a light tessellated hexagon pattern and can only be seen from certain angles of light. This serves as an anti-counterfeit measure so you know you are getting a genuine Maxpedition[®] product. To check for the hexagon fabric, open the main compartment of the pack. Slowly move the pack back and forth so that different angles put lighting on the fabric. If the hexagons cannot be seen in the fabric, it is not a genuine Maxpedition[®] product.

CARE TIPS

GENUINE YKK[®] ZIPPERS AND ZIPPER TRACKS

To increase the longevity of the YKK® zippers and tracks:

- Zippers should be kept away from directly striking hard objects (e.g. stones etc.).
- Avoid improper treatment of the painted (coated) zippers, such as direct striking, scratching, or wearing against hard objects.
- Do not apply strong or high concentrations of bleaching agents.Do not forcibly close a zipper on a
- bag that has been overfilled.
- If a slider is caught on thread or cloth, do not free the slider by force. Pull the slider back, removing the trapped thread or cloth. When the slider bites deeply into cloth, do not force it back but work it back gently.





- After each trip, thoroughly clean your pack.
- Rinse your pack with fresh water if dirt, sweat, salt and stains have worked their way into fabrics, webbing or mesh.
- To clean, simply wipe down with a damp cloth and allow the gear to dry naturally in a well-ventilated area out of direct sunlight.
- Do not machine wash.
- Do not use detergent or bleach on fabrics or webbing.
- Clean the zippers using a mild soap, warm water and a soft brush. Flush water and soap through the buckles. Keeping dirt and debris out of the zippers and buckles will help keep them in proper working condition.

RIFTBLADE / 30L

SIZE COMPARISON Above is a size comparison of the Bifthlade

Above is a size comparison of the Riftblade, Riftcore and Riftpoint on a 5'10" 180lbs male.




RIFTCORE / 23L RIFTPOINT / 15L

COMPONENTS & MATERIALS



YKK[®] Zippers with Positive **Grip Zipper Pulls**

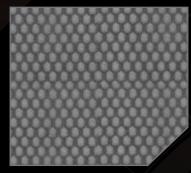


Fray-Resistant Gossamer™ Mesh




Very Visible Grayscale Interior



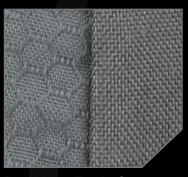


500D Hex Ripstop / 1000D Plain Weave

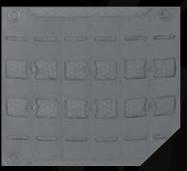

Dual Nylon Fabric Construction ATtachment LAttice System - ATLAS[™] CCW Compartment with Cut from 840D Nylon-TPU Composite Security Lockout Strip



Anti-Counterfeit Logo

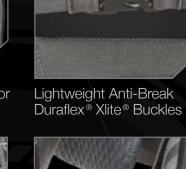



Skin Friendly Nylon Seatbelt Webbing



Bartacks



High Quality Embroidered Logo



Phone: 310.768.0098 Fax: 310.515.5950 General: Info@Maxpedition.com Customer Service: CS@Maxpedition.com Government: Gov@Maxpedition.com Wholesale: Dealer@Maxpedition.com

CONNECT


- Maxpedition.com
- www.Maxpedition.TV

DISCLAIMER

Maxpedition will not be held responsible for typographical errors, technical inaccuracies, or omissions. It is the responsibility of the customer to determine the suitability of Maxpedition products for use in his/her particular application, to follow all firearms safety rules, and to abide by all applicable laws.

IP




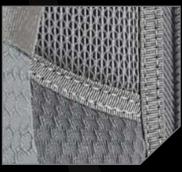

Bi-Level High Grade 3D Airmesh Backing



Padded compartment with exterior loop field

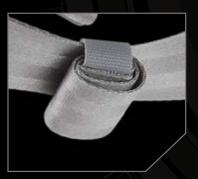


Hook and loop strap organizer



Reinforced Yoke Backpack Straps







Embossed 420D Nylon Liner

RIFTBLADE[™]

f www.Facebook.com/Maxpedition www.Twitter.com/Maxpedition www.Instagram.com/Maxpedition • www.MaxpeditionInAction.com

Maxpedition stylized font and bootprint logo, Maxpedition wordmark, Gearslinger, Versipack, Rollypoly and TacTie are federally and/or internationally registered trademarks of Edgygear Inc. Products depicted in this catalog are protected by U.S. or international patents and/or patents pending.

Copyright © 2018 Edgygear Inc. All Rights Reserved.

MAXPEDITION



